



Huawei P9 Plus Display

Written By: Dominik Schnabelrauch





TOOLS:

- [SIM Card Eject Tool](#) (1)
- [Spudger](#) (1)
- [iSclack](#) (1)
- [Tweezers](#) (1)



PARTS:

- [Huawei P9 Plus LCD Screen and Digitizer](#) (1)
- [Tesa 61395 Tape](#) (1)

Step 1 — Display




- Use a tweezer to remove the liquid contact indicator that sits on top of the screw next to the antenna cable.
- Unplug the antenna cable and release it from the bracket on the metal plate covering the main flex cable.
- Remove the four Phillips #000 screws.

Step 2




- The plate, which is covering the motherboard flex cable, has little hooks on each side. Use a tweezer to free them and unhinge the plate by carefully moving it upwards.
- Use a spudger to unplug the motherboard flex cable and remove it.
- Unplug the flex connector of the loudspeaker.

Step 3

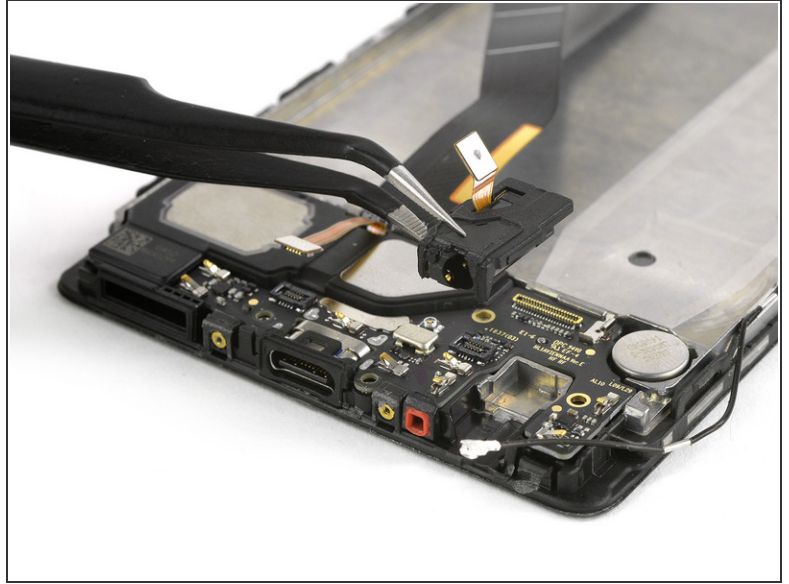

- Use a spudger to unplug the flex connector of the headphone jack.
- Remove the headphone jack.

 Be careful with the contacts inside and in the bottom area of the headphone jack. They can be damaged easily.

Step 4



- Use a spudger to lift out the daughter board.
- Lift the loudspeaker out of the mid frame. There is some adhesive underneath, so it can be a little bit sticky.

To reassemble your device, follow these instructions in reverse order. Reapply adhesive where necessary.

This document was last generated on 2017-09-22 04:29:10 PM.